
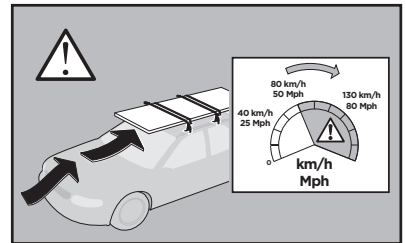
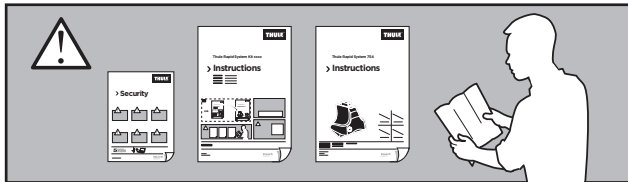
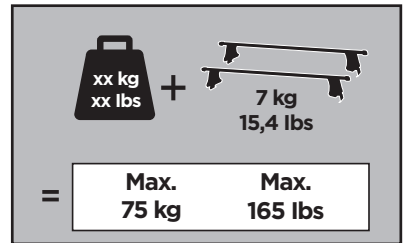


# Thule Rapid System Kit 1092

# > Instructions

**MERCEDES BENZ CLK (W208), 2-dr Coupé, 97-02**

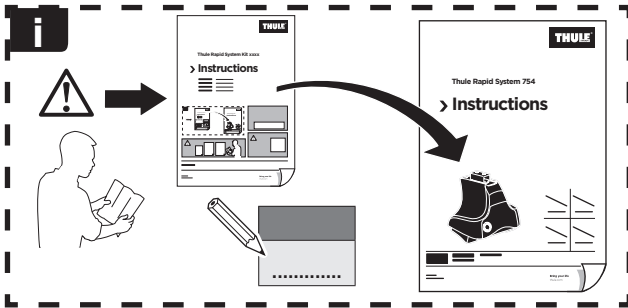

ISO 11154-E


**141092**

C.20130107  
519-1092-01

**Bring your life**  
thule.com



23 x2




218 x2




x1

24 x2





219 x2



x1

1



	X (scale)	X (mm)	X (inch)
<b>MERCEDES BENZ CLK (W208), 2-dr Coupé, 97-02</b>	<b>29,5</b>	<b>946</b>	<b>37 1/4</b>

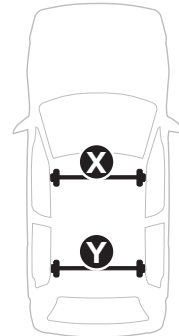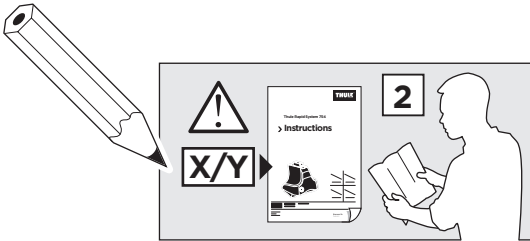


	Y (scale)	Y (mm)	Y (inch)
<b>MERCEDES BENZ CLK (W208), 2-dr Coupé, 97-02</b>	<b>28</b>	<b>931</b>	<b>36 5/8</b>

2

MERCEDES BENZ CLK (W208), 2-dr Coupé, 97-02

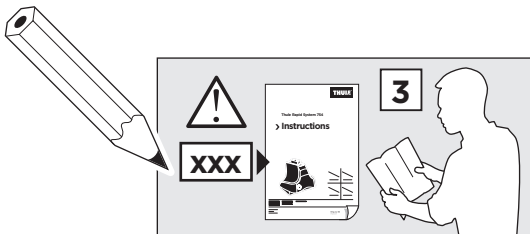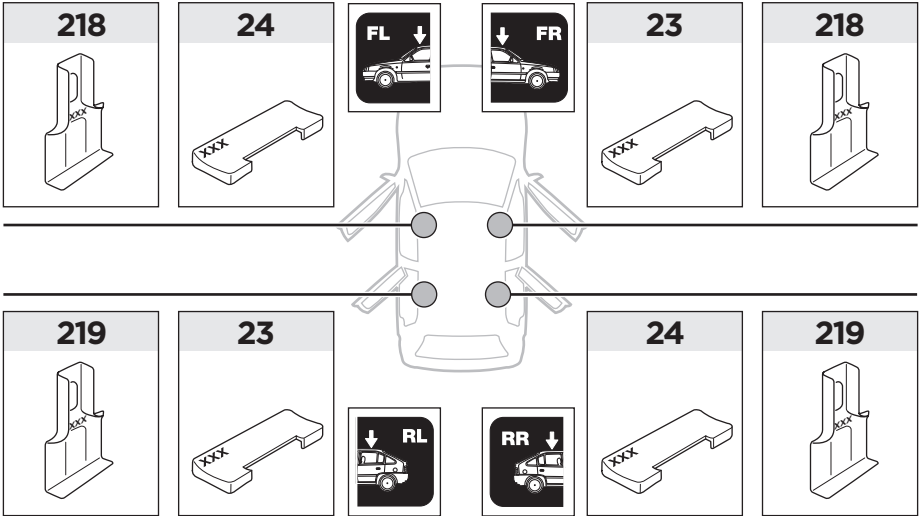

**3**

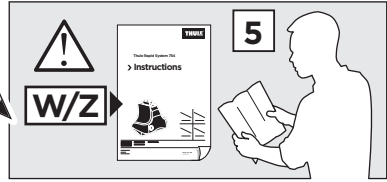

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>MERCEDES BENZ CLK (W208), 2-dr Coupé, 97-02</b>	<b>190</b>	<b>630</b>	<b>7 1/2</b>	<b>24 3/4</b>

