






# Thule Rapid System Kit 1566

# > Instructions

**TOYOTA Prius, 5-dr Hatchback w/ Solar Panel, \*10-15**

**TOYOTA Prius, 5-dr Hatchback, 09-15 / \*10-15**

\*North America

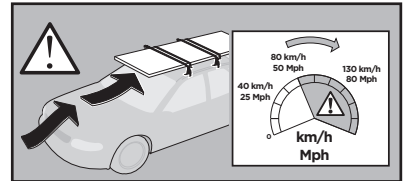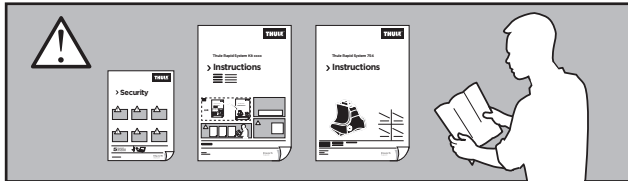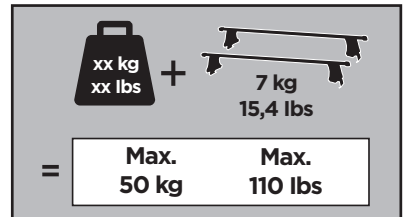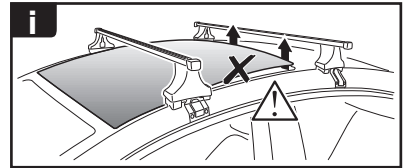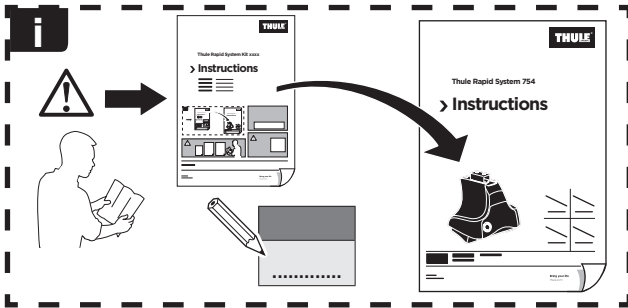

ISO 11154-E


141566

C.20160712  
519-1566-04


Bring your life  
thule.com




269 x1



271 x2



272 x1




1052 x2



1057 x2





x1



x1

1

	X (scale)	X (mm)	X (inch)
<b>TOYOTA Prius, 5-dr Hatchback w/ Solar Panel, *10-15</b>	<b>38</b>	<b>1030</b>	<b>40 1/2</b>
<b>TOYOTA Prius, 5-dr Hatchback, 09-15 / *10-15</b>	<b>39</b>	<b>1041</b>	<b>41</b>

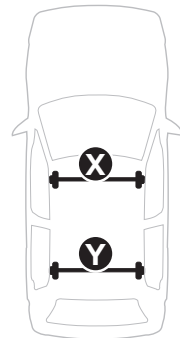
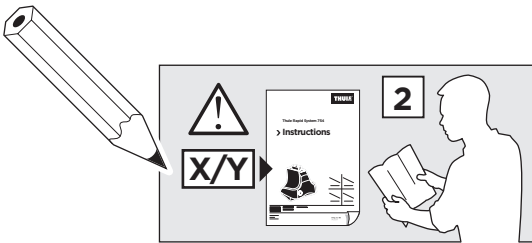



	Y (scale)	Y (mm)	Y (inch)
<b>TOYOTA Prius, 5-dr Hatchback w/ Solar Panel, *10-15</b>	<b>34</b>	<b>990</b>	<b>39</b>
<b>TOYOTA Prius, 5-dr Hatchback, 09-15 / *10-15</b>	<b>35,5</b>	<b>1006</b>	<b>39 5/8</b>

**2**

**TOYOTA Prius, 5-dr Hatchback w/ Solar Panel, \*10-15**

**TOYOTA Prius, 5-dr Hatchback, 09-15 / \*10-15**

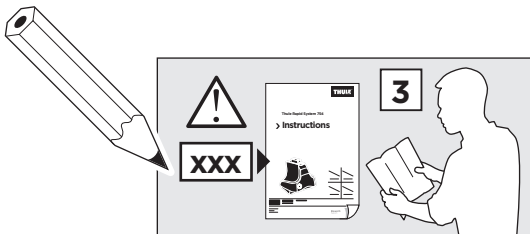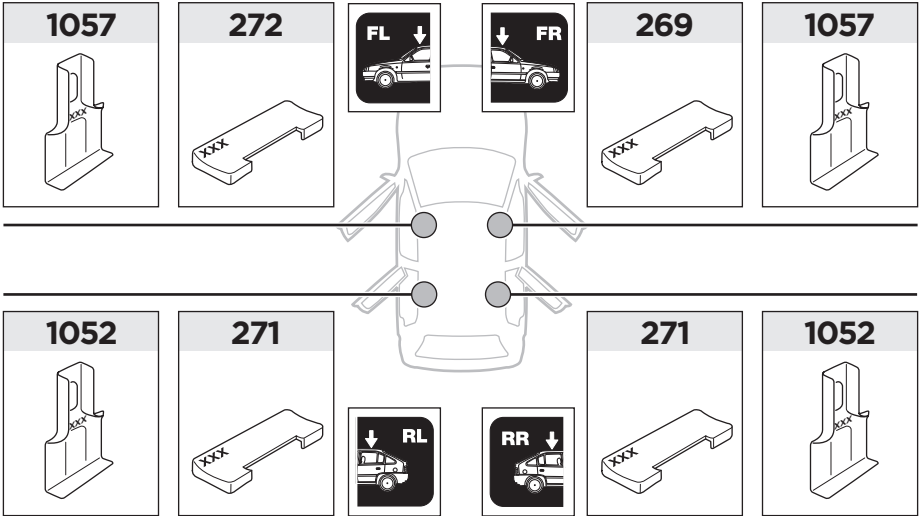

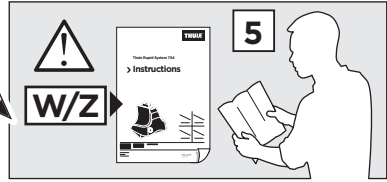**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>TOYOTA Prius, 5-dr Hatchback w/ Solar Panel, *10-15</b>	<b>280</b>	<b>673</b>	<b>11</b>	<b>26 1/2</b>
<b>TOYOTA Prius, 5-dr Hatchback, 09-15 / *10-15</b>	<b>310</b>	<b>700</b>	<b>12 1/4</b>	<b>27 1/2</b>

